

PC Toggle

Used to toggle between two separate PC numbers

Enter the On #, Off # and Channel for which to send your message.

When pressing the switch associated with this Midi type, the On # will be sent first then the Off # will be sent on the second press, this process will repeat each time the button is pressed. Switching banks will reset the counter and the On # will be sent with the first button press.

← Message #: Message 1 ▼ Midi Channel: Channel 1 ▼

Press Action: Press ▼ Message Type: PC Toggle ▼

On #: 80 - [Slider]

Off #: 30 - [Slider]

Value 2: 0 - [Slider]

Hold BPM Dial for 3s to Clear Preset

Revision #2

Created 10 June 2024 15:23:44 by Junior Thomason

Updated 10 June 2024 16:51:44 by Junior Thomason