

PC

Generally used to recall presets on your Midi device

Enter the Number and Channel for which to send your message

← Message #: Message 1 ▼ Midi Channel: Channel 1 ▼

Press Action: Press ▼ Message Type: PC ▼

Number: 36 - [Slider]

Value 1: 0 - [Slider]

Value 2: 0 - [Slider]

Hold BPM Dial for 3s to Clear Preset

Revision #4

Created 10 June 2024 15:16:50 by Junior Thomason

Updated 10 June 2024 16:51:44 by Junior Thomason