

PC

Generally used to recall presets on your Midi device

Enter the Number and Channel for which to send your message



The image shows a dark-themed user interface for configuring a MIDI preset. At the top left is a circular icon with a left-pointing arrow. The interface is organized into two columns. The left column contains 'Message #:' with a dropdown menu showing 'Message 1', 'Press Action:' with a dropdown menu showing 'Press', and 'Number: 36' followed by a horizontal slider with a red knob. The right column contains 'Midi Channel:' with a dropdown menu showing 'Channel 1', 'Message Type:' with a dropdown menu showing 'PC', and 'Value 1: 0' and 'Value 2: 0', each followed by a horizontal slider with a red knob. At the bottom, a text instruction reads 'Hold BPM Dial for 3s to Clear Preset'.

Message #: Message 1 ▾

Midi Channel: Channel 1 ▾

Press Action: Press ▾

Message Type: PC ▾

Number: 36 - [Slider] +

Value 1: 0 - [Slider] +

Value 2: 0 - [Slider] +

Hold BPM Dial for 3s to Clear Preset

Revision #4

Created Mon, Jun 10, 2024 3:16 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason