

# PC

Generally used to recall presets on your Midi device

Enter the Number and Channel for which to send your message



The image shows a dark-themed user interface for configuring a MIDI preset. At the top left is a circular icon with a left-pointing arrow. Below it are two columns of settings. The first column has 'Message #' with a dropdown menu showing 'Message 1', 'Press Action:' with a dropdown menu showing 'Press', 'Number: 36' with a slider control, 'Value 1: 0' with a slider control, and 'Value 2: 0' with a slider control. The second column has 'Midi Channel:' with a dropdown menu showing 'Channel 1', 'Message Type:' with a dropdown menu showing 'PC', and a text instruction at the bottom: 'Hold BPM Dial for 3s to Clear Preset'.

← Message #: Message 1 ▼ Midi Channel: Channel 1 ▼

Press Action: Press ▼ Message Type: PC ▼

Number: 36 - +

Value 1: 0 - +

Value 2: 0 - +

Hold BPM Dial for 3s to Clear Preset

Revision #4

Created Mon, Jun 10, 2024 3:16 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason