

# PC

Generally used to recall presets on your Midi device

Enter the Number and Channel for which to send your message



The image shows a dark-themed user interface for configuring a MIDI preset. At the top left is a circular icon with a left-pointing arrow. The interface includes several dropdown menus and sliders. The 'Message #' dropdown is set to 'Message 1'. The 'Midi Channel:' dropdown is set to 'Channel 1'. The 'Press Action:' dropdown is set to 'Press'. The 'Message Type:' dropdown is set to 'PC'. Below these are three sliders: 'Number: 36' (with a pink knob), 'Value 1: 0' (with a purple knob), and 'Value 2: 0' (with a purple knob). Each slider has minus and plus icons at its ends. At the bottom, a text instruction reads 'Hold BPM Dial for 3s to Clear Preset'.

← Message #: Message 1 ▼ Midi Channel: Channel 1 ▼

Press Action: Press ▼ Message Type: PC ▼

Number: 36 - [slider] +

Value 1: 0 - [slider] +

Value 2: 0 - [slider] +

Hold BPM Dial for 3s to Clear Preset

---

Revision #4

Created Mon, Jun 10, 2024 3:16 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason