

Stop MIDI Clock

Used to stop the MIDI clock signal from being sent to the output of the Unity6 MIDI jack.



The screenshot shows a dark-themed MIDI control interface. At the top left is a pink circular button with a left-pointing arrow. To its right are two dropdown menus: 'Message #' set to 'Message 1' and 'Midi Channel:' set to 'Channel 1'. Below these are two more dropdowns: 'Press Action:' set to 'Press' and 'Message Type:' set to 'Stop MIDI Clock'. Further down are three horizontal sliders, each labeled 'Number:', 'Value 1:', and 'Value 2:' respectively, all with a value of 0. Each slider has a pink knob and is flanked by a minus sign on the left and a plus sign on the right. At the bottom, a text instruction reads 'Hold BPM Dial for 3s to Clear Preset'.

← Message #: Message 1 ▼ Midi Channel: Channel 1 ▼

Press Action: Press ▼ Message Type: Stop MIDI Clock ▼

Number: 0 - +

Value 1: 0 - +

Value 2: 0 - +

Hold BPM Dial for 3s to Clear Preset

Revision #1

Created Mon, Jun 10, 2024 5:02 PM by Junior Thomason

Updated Wed, Jun 12, 2024 6:39 PM by Junior Thomason