

Stop MIDI Clock

Used to stop the MIDI clock signal from being sent to the output of the Unity6 MIDI jack.



The image shows a dark-themed user interface for configuring a MIDI action. At the top left is a pink circular icon with a left-pointing arrow. The interface is divided into two columns. The left column contains 'Message #:' with a dropdown menu showing 'Message 1', 'Press Action:' with a dropdown menu showing 'Press', and three horizontal sliders labeled 'Number:', 'Value 1:', and 'Value 2:', each with a value of 0 and a pink knob. The right column contains 'Midi Channel:' with a dropdown menu showing 'Channel 1', 'Message Type:' with a dropdown menu showing 'Stop MIDI Clock', and the same three sliders. At the bottom, a text instruction reads 'Hold BPM Dial for 3s to Clear Preset'.

Message #: Message 1

Midi Channel: Channel 1

Press Action: Press

Message Type: Stop MIDI Clock

Number: 0 - +

Value 1: 0 - +

Value 2: 0 - +

Hold BPM Dial for 3s to Clear Preset

Revision #1

Created 10 June 2024 17:02:15 by Junior Thomason

Updated 12 June 2024 18:39:34 by Junior Thomason