

Stop MIDI Clock

Used to stop the MIDI clock signal from being sent to the output of the Unity6 MIDI jack.



The image shows a dark-themed MIDI configuration interface. At the top left is a pink circular button with a left-pointing arrow. To its right are two dropdown menus: 'Message #' set to 'Message 1' and 'Midi Channel:' set to 'Channel 1'. Below these are two more dropdown menus: 'Press Action:' set to 'Press' and 'Message Type:' set to 'Stop MIDI Clock'. At the bottom of the configuration area are three horizontal sliders, each labeled 'Number:', 'Value 1:', and 'Value 2:', all with their values set to 0. Each slider has a pink knob and is flanked by minus and plus signs. At the very bottom, a text instruction reads 'Hold BPM Dial for 3s to Clear Preset'.

Message #: Message 1

Midi Channel: Channel 1

Press Action: Press

Message Type: Stop MIDI Clock

Number: 0 - +

Value 1: 0 - +

Value 2: 0 - +

Hold BPM Dial for 3s to Clear Preset

Revision #1

Created 10 June 2024 17:02:15 by Junior Thomason

Updated 12 June 2024 18:39:34 by Junior Thomason