

Toggle Amp Switch

Used to toggle on/off a switch found on any tube/solid state amplifier. Amp switches are typically channel switching or effect switching like reverb, tremolo, etc.

You can control up to 4 separate amp switches by plugging each amp switch into any of the 4 UniPorts. Before you can control the amp's switch, you must assign the appropriate UniPort to be used for each amp. See [here](#) for instruction on programming each UniPort.

Select the UniPort number to control the amp's switch that is plugged into the corresponding UniPort



The screenshot shows a dark-themed configuration interface for a 'Toggle Amp Switch'. At the top left is a back arrow icon, and at the top center is a hamburger menu icon. The interface is organized into two columns. The left column contains 'Message #:' with a dropdown menu set to 'Message 1', 'Press Action:' with a dropdown menu set to 'Press', and 'UniPort:' with a value of '2'. The right column contains 'Midi Channel:' with a dropdown menu set to 'Channel 1', 'Message Type:' with a dropdown menu set to 'Toggle Amp Switch', and three horizontal sliders for 'Value 1' and 'Value 2', both set to 0. Each slider has a minus sign on the left and a plus sign on the right. The UniPort value '2' is highlighted in pink.

Revision #1

Created 15 November 2024 16:53:24 by Junior Thomason

Updated 15 November 2024 16:56:38 by Junior Thomason