

# Toggle Amp Switch

Used to toggle on/off a switch found on any tube/solid state amplifier. Amp switches are typically channel switching or effect switching like reverb, tremolo, etc.

You can control up to 4 separate amp switches by plugging each amp switch into any of the 4 UniPorts. Before you can control the amp's switch, you must assign the appropriate UniPort to be used for each amp. See [here](#) for instruction on programming each UniPort.

Select the UniPort number to control the amp's switch that is plugged into the corresponding UniPort



The image shows a screenshot of a MIDI controller interface with a dark blue background. At the top left is a pink circular button with a white left-pointing arrow. To its right is a hamburger menu icon (three horizontal lines). Below these are two dropdown menus: 'Message #' set to 'Message 1' and 'Midi Channel:' set to 'Channel 1'. Further down are two more dropdown menus: 'Press Action:' set to 'Press' and 'Message Type:' set to 'Toggle Amp Switch'. At the bottom, there are three horizontal sliders. The first slider is labeled 'UniPort: 2' on the left and has a pink knob positioned at the center. The second slider is labeled 'Value 1: 0' on the left and has a pink knob at the far left. The third slider is labeled 'Value 2: 0' on the left and also has a pink knob at the far left. Each slider has a minus sign on the left and a plus sign on the right.

---

Revision #1

Created Fri, Nov 15, 2024 4:53 PM by Junior Thomason

Updated Fri, Nov 15, 2024 4:56 PM by Junior Thomason