

Toggle Boost

Used to toggle on/off the post loop clean boost.

Select between 3dB, 5dB, 7dB, 9dB, or 12dB of clean boost.



The image shows a digital control interface for a 'Toggle Boost' function. It features a dark blue background with white and yellow text and controls. At the top left is a yellow circular button with a left-pointing arrow. To its right are two dropdown menus: 'Message #' set to 'Message 1' and 'Midi Channel:' set to 'Channel 1'. Below these are two more dropdowns: 'Press Action:' set to 'Press' and 'Message Type:' set to 'Toggle Boost'. The main control is a 'Boost:' slider, currently set to '4', with a yellow knob and a range from '-' to '+'. Above the slider, '9 dB' is displayed in yellow. Below the slider are two more sliders, 'Value 1:' and 'Value 2:', both set to '0'. At the bottom, a text instruction reads 'Hold BPM Dial for 3s to Clear Preset'.

Message #: Message 1 ▾

Midi Channel: Channel 1 ▾

Press Action: Press ▾

Message Type: Toggle Boost ▾

Boost: 4 - 9 dB +

Value 1: 0 - +

Value 2: 0 - +

Hold BPM Dial for 3s to Clear Preset

Revision #2

Created Mon, Jun 10, 2024 3:59 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason