

# Toggle Boost

Used to toggle on/off the post loop clean boost.

Select between 3dB, 5dB, 7dB, 9dB, or 12dB of clean boost.



The image shows a digital control interface for a 'Toggle Boost' function. It features a dark blue background with white and yellow text and controls. At the top left is a yellow circular button with a left-pointing arrow. Below it are two dropdown menus: 'Message #' set to 'Message 1' and 'Midi Channel:' set to 'Channel 1'. Further down are 'Press Action:' set to 'Press' and 'Message Type:' set to 'Toggle Boost'. A prominent yellow '9 dB' label is positioned above a horizontal slider. The slider has a yellow knob and is flanked by minus and plus signs. Below the slider are two more horizontal sliders labeled 'Value 1' and 'Value 2', both with yellow knobs and minus/plus controls. At the bottom, a text instruction reads 'Hold BPM Dial for 3s to Clear Preset'.

Message #: Message 1

Midi Channel: Channel 1

Press Action: Press

Message Type: Toggle Boost

Boost: 4 - 9 dB +

Value 1: 0 - +

Value 2: 0 - +

Hold BPM Dial for 3s to Clear Preset

Revision #2

Created Mon, Jun 10, 2024 3:59 PM by Junior Thomason

Updated Mon, Jun 10, 2024 4:51 PM by Junior Thomason