

Updating the Firmware


First you must download the most recent firmware file from our website found [here](#). The downloaded file will be a zip file, you must extract the zip file and save the .bin firmware file somewhere you can easily access for the next step. Mac users, simply double click the zip file to extract it. You may get the following warning message which you can ignore.




The firmware file will end with the .bin extension, this is the file you will upload to the Unity6. Now connect to the Unity6's WiFi using [these](#) steps.

Once connected to the Unity6's WiFi network, open a web browser and type in the following URL:
jetpedals.local


The Firmware Uploader page will automatically load

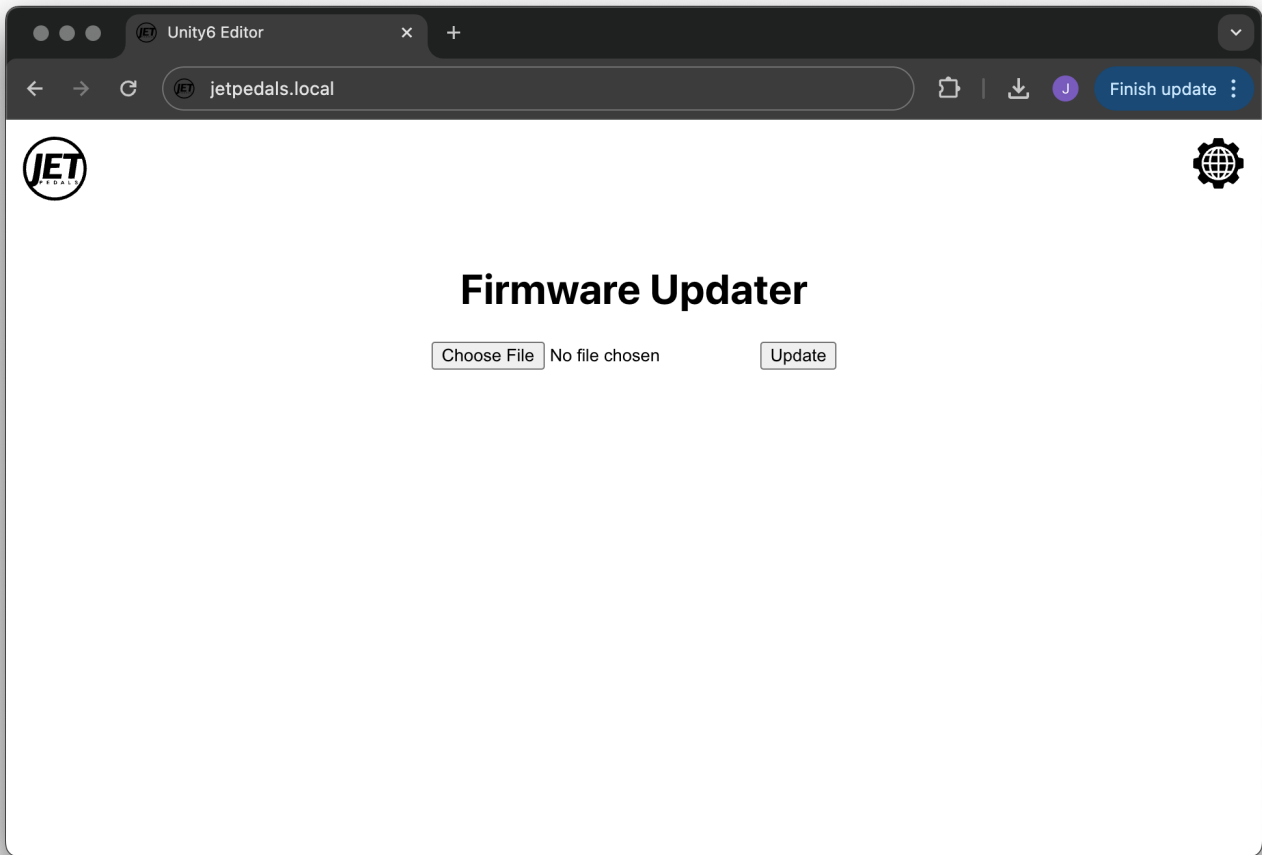


Hit the Choose File button and select the .bin file downloaded from our website

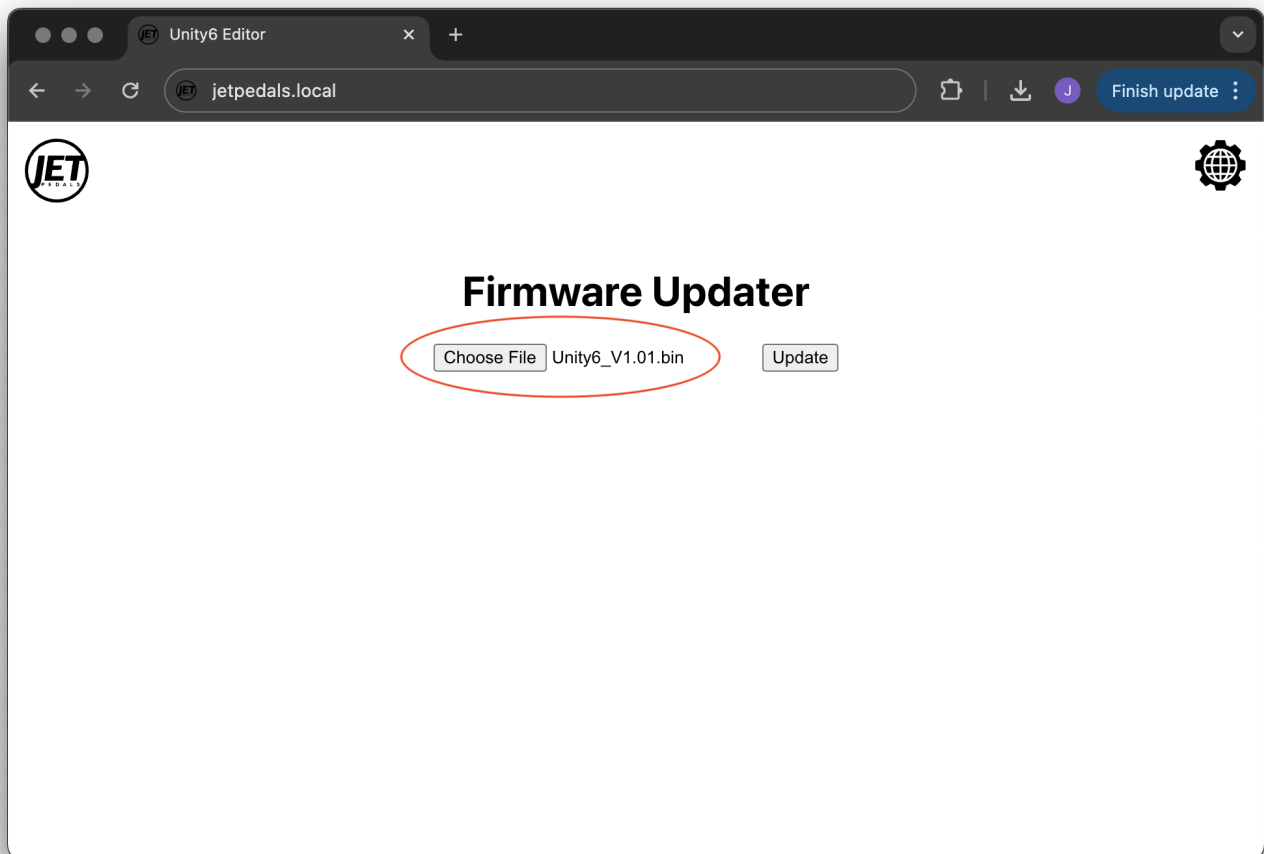

Hit the Update button and the progress bar will show the status of the upload

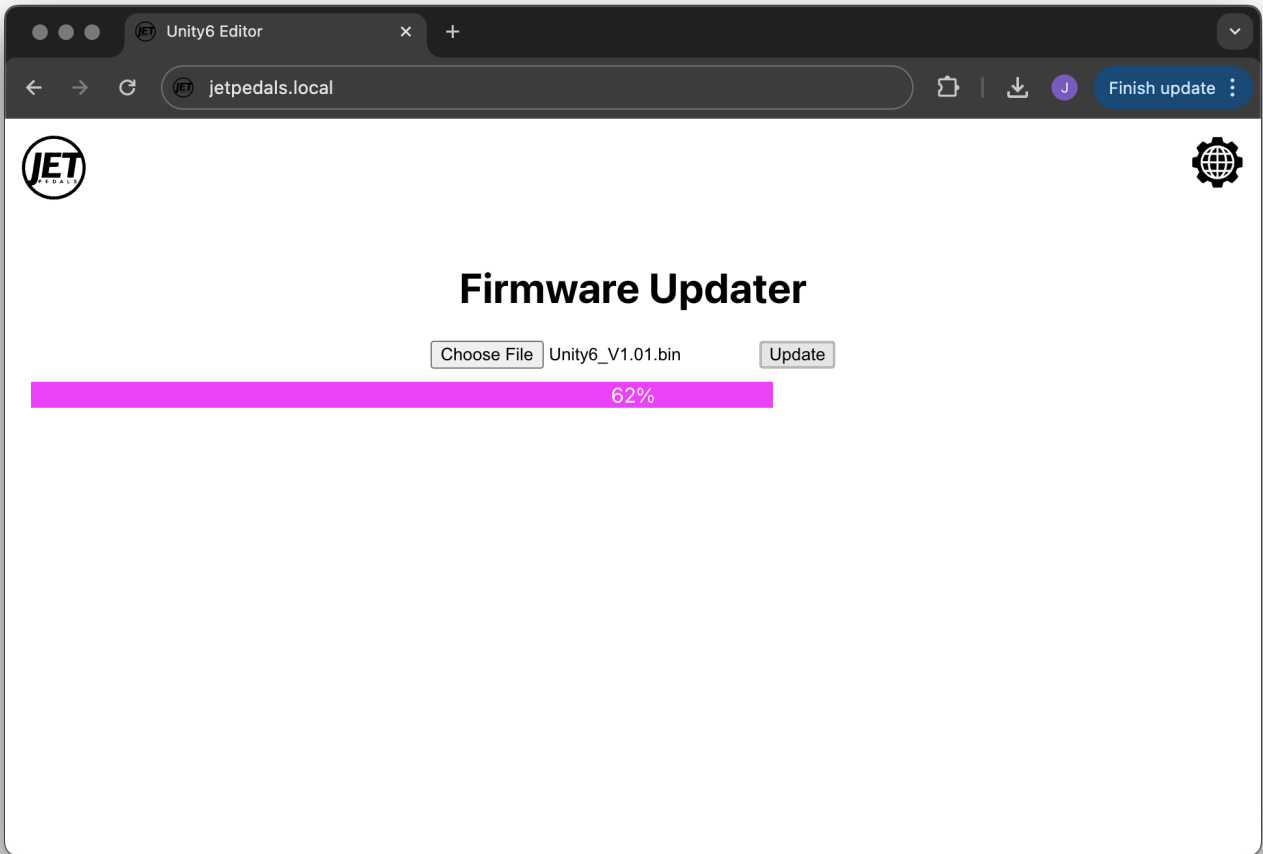

Once finished, the Unity6 will reboot and the new firmware update has been completed

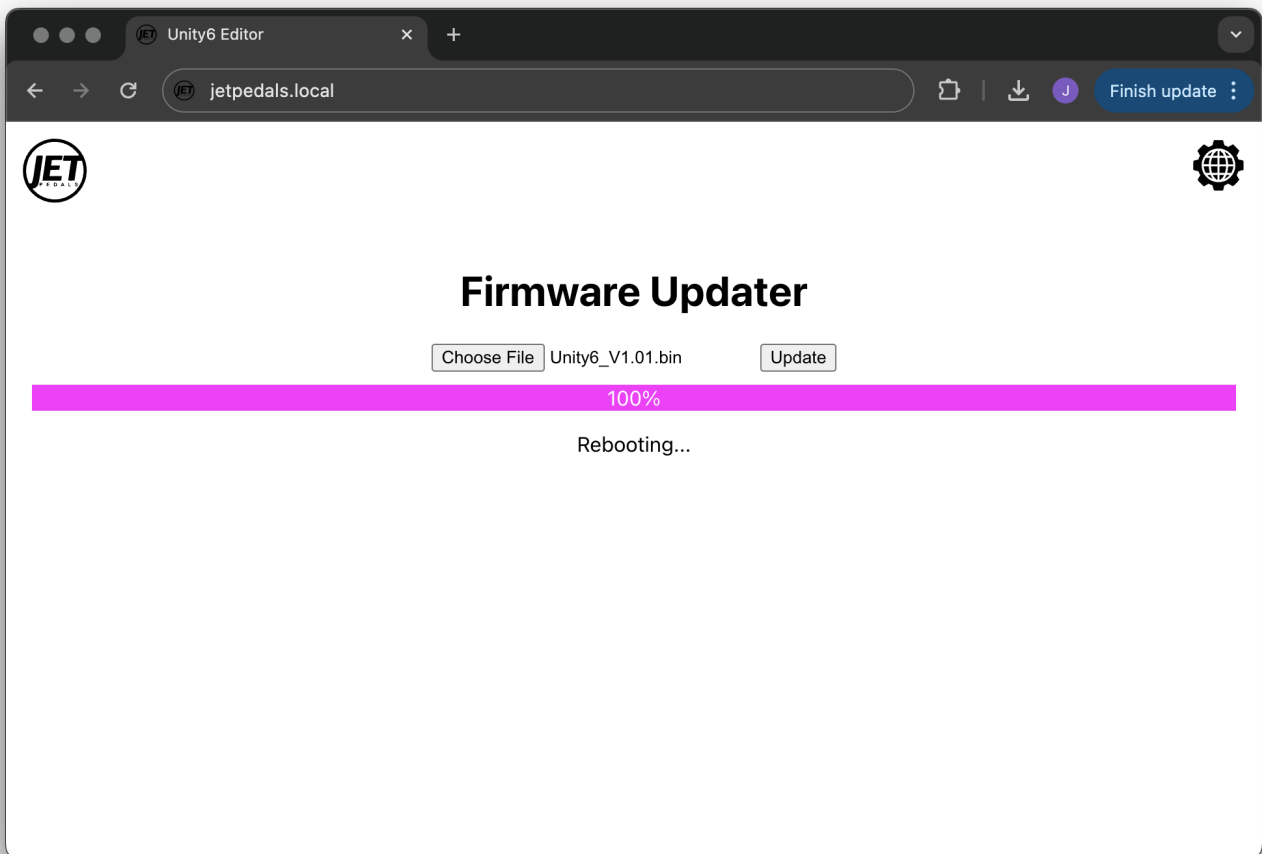

Revision #4

Created 10 June 2024 19:16:21 by Junior Thomason

Updated 5 May 2025 17:07:09 by Junior Thomason