
Control Change Toggle

Used to toggle between two separate CC values

> Enter the CC#'s, Values, and Channel for which to send your message.
>
> When pressing the button associated with this Midi type, the CC# and Value above Max/On will be sent fist then the CC# and value above Min/Off will be sent on the second press, this process will repeat each time the button is pressed. Switching banks will reset the counter and Max/On will be sent with the first button press.

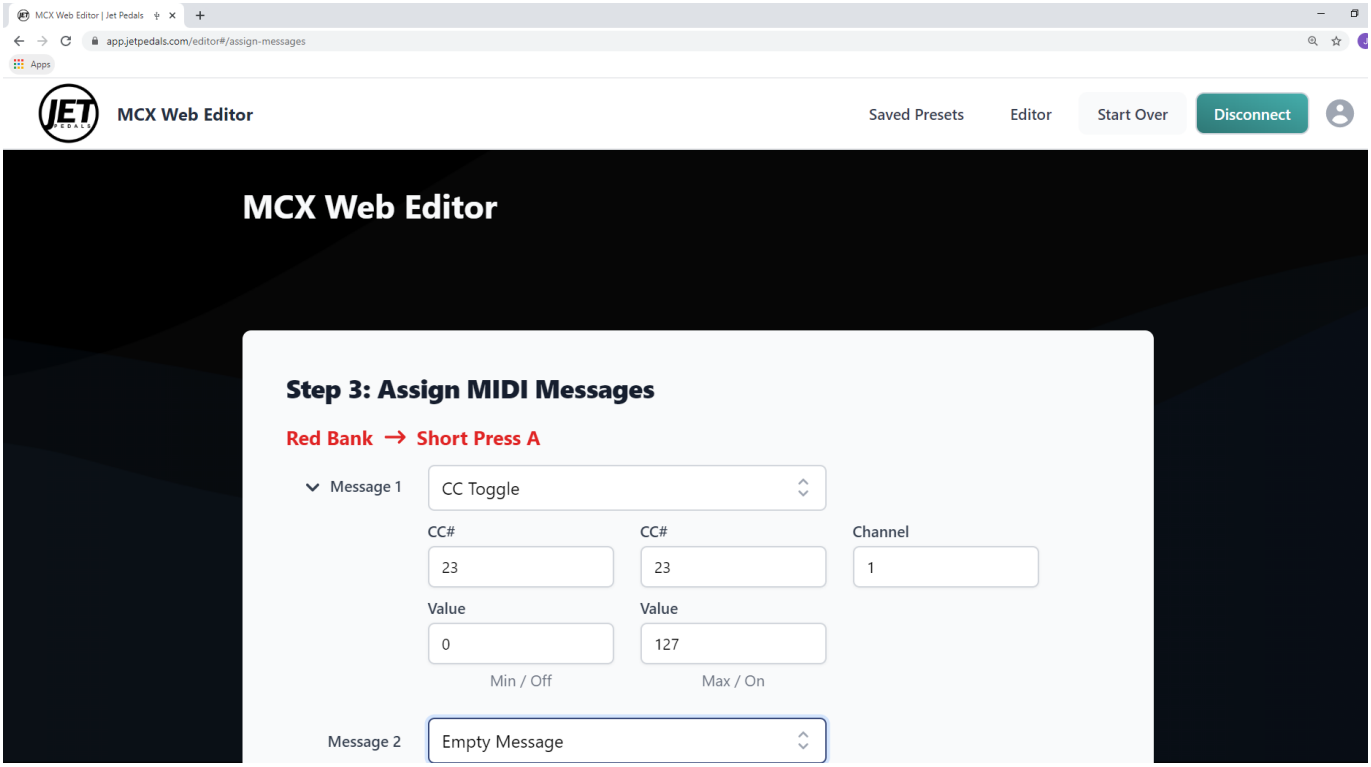

Revision #2
Created 27 July 2020 01:15:30 by Junior Thomason
Updated 30 July 2020 01:51:05 by Junior Thomason